


● 16PIN

16PIN		
1	GND	
2	BATT	
3	ACC	ACC
4	ILL	
5	BACK_CON	
6	AD2_IN	
7	AD1_IN	
8	ANT+12V	
9	OUT_FR-	
10	OUT_RL-	
11	OUT_FR+	
12	OUT_RL+	
13	OUT_FL-	
14	OUT_RR+	
15	OUT_FL+	
16	OUT_RR-	

● 60PIN RCA

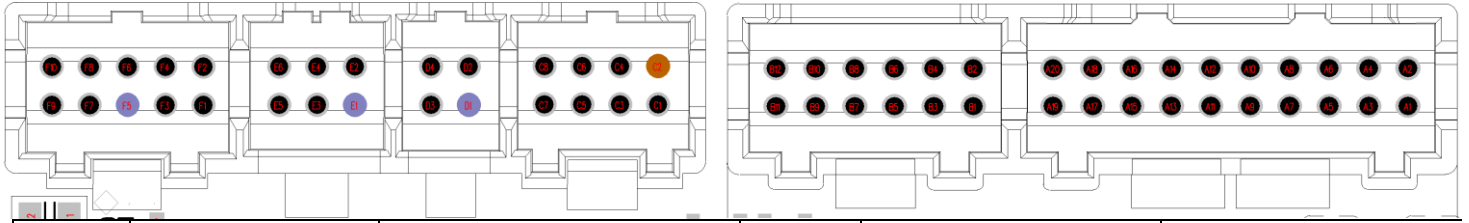

A1	AMP_POW		C1	GND	
A2	GND	RCA_FL/ FR)	C2	BATT_12V	12V
A3	AUXIN_R		C3	ASL_OUT	
A4	RCA_FL		C4	ASR_OUT	
A5	AUXIN_L		C5	KEY_RST	
A6	RCA_FR		C6	NC	
A7	SIM0_DA	SIM	C7	CAN_TXD	TX
A8	GND	AUXIN L/AUXIN R)	C8	CAN_RXD	RX
A9	SIM0_DET	SIM ②	D1	USB 5V	USB
A10	GND	SIM	D2	USB_DP0	USB0 DP
A11	SIM0_CKL	SIM	D3	GND	USB
A12	GND	CVBS IN2)	D4	USB_DN0	USB0 DN
A13	SIM0_RST	SIM	E1	USB 5V	USB
A14	AV_VIDI_OUT	NC	E2	USB_DP1	USB1 DP
A15	VDD_SIM0	SIM	E3	GND	USB
A16	SUB		E4	USB_DN1	USB1 DN
A17	CVBS3_IN	CVBS_IN	E5	USB_DN2	USB2 DN (新增)
A18	CVBS6_IN	AUX_VID	E6	USB_DP2	USB2 DP (新增)
A19	MIC-		F1	RXD_TPMS	TX
A20	MIC+		F2	BT_ANT	
B1	L_TURN	L_TURN	F3	TXD_TPMS	RX
B2	R_TURN	R_TURN	F4	GND	
B3	GND	GND	F5	IR	IR CMMB)
B4	F_CAM_VID	F_CAM_VID	F6	CAM_CVBS	CAM_VID
B5	GND	GND	F7	CAM12_OUT	12V
B6	R_CAM_VID	R_CAM_VID	F8	CVBS_GND	
B7	GND	GND	F9	PARK_IN	
B8	REAR_CAM_VID	REAR_CAM_VID	F10	BTWIFI_ANT	/WIFI
B9	GND	GND			
B10	L_CAM_VID	L_CAM_VID			
B11	360_5V	360_5V			
B12	360_5V	360_5V			